



PinPac1/PinPac2 Installation Manual

Version 2.3 April 30, 2013



Contents

- 1. Warnings and Agreements.....1
- 2. What’s included in the PinPac1 and 2 Kits.2
- 3. Requirements:2
- 4. Preparation.....2
- 5. Back Box Installation.....2
- 6. Coin Door Installation PinPac1:4
- 7. Coin Door Installation PinPac2:4
- 8. Running the cable.....5
- 9. Coin door Final installation5
- 10. Final Checkout5
- 11. Back Box Boards.....6
- 12. Trim Pot Function7
- 13. Recommended Headphones.7

1. Warnings and Agreements


Welcome! The PinPac1 Pinball Person Audio Controller has been designed for simplicity of installation! As with any Pinball Machine modification and add on kit there is a required level of expertise for the installation. If you are not proficient in basic pinball parts installation we recommend having our kit installed by someone who is proficient with the basics of pinball repair. Pinnovators requires our kit be installed by an experienced Pinball service technician with basic electrical skills. As with any electrical piece of equipment a danger does exist and you must agree to not hold Pinnovators responsible for any injury, damages, etc. before continuing.

Sound Levels: Pinnovators recommends running your headphone sound level at a safe level to prevent long term hearing loss. For a good example of recommend sound levels, we recommend following suggestions given by major audio equipment manufacturers such as Apple and their Ipod.

phys.org/news80304823.html
www.macworld.com/article/1060274/hearingprotection.html




ESD: We recommend always discharging the headphone cable by touching it to an exposed metal part of the pinball machine before plugging it into the machine.

Power Cord: ALWAYS UNPLUG THE POWER CORD for safety when working on your pinball machine!



Playfield Propping: Pinnovators highly advises following Playfield propping instruction for your pinball machine. These instructions are typically found inside the Operators manual for each machine. Failure to follow these instructions can cause fatal injuries or even Death. Pinnovators also recommends having an assistant hold a propped playfield in the up position when servicing under the playfield.

2. What's included in the PinPac1 and 2 Kits


PinPac1 or 2 Front Panel	
Back Box Board (Specific to the kit ordered)	
Interface Cable	

3. Requirements:

- A. The Pinnovators PinPac1 and 2 systems require a Dollar Bill Acceptor slot on the machine's Coin door in the upper location (PP1) or lower location (PP2 Sterns only).
- B. The Machine must have a sound board / MPU system shown in the Back Box Installation section below. Please visit IPDB.ORG to learn what system your machine has. Pinnovators.com now provides a list of pinball systems we have a kit for.

4. Preparation

Unplug the Pinball Machine!

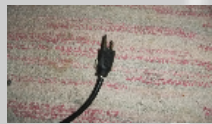

Next remove the back glass on the system and open the light board to expose the System circuit boards. Star Trek The Next Generation is shown below as an example.



5. Back Box Installation


Pinnovators offers many kits for five of the most popular pinball systems as of the writing of this document.

Ref	Pinnovators Part Number	Description
1	330_003_WPC_DM	WPC-Dot Matrix
2	330_004_WPC_DCS	WPC_DCS
3	330_005_WPC_95	WPC_95
4	330_012_STN_WST	Stern Whitestar +modified
5	330_013_STN_SAM	Stern S.A.M. Board System


We will cover the basic installation of the 330_003_WPC_DM WPC-Dot Matrix kit in the following section and we will include an addendum for the Back Box Board you purchase at the end of this manual.

330_003_WPC_DM WPC-Dot Matrix (Example Machines: T2 and Twilight Zone)

The sound board is the upper center board on a Twilight Zone.

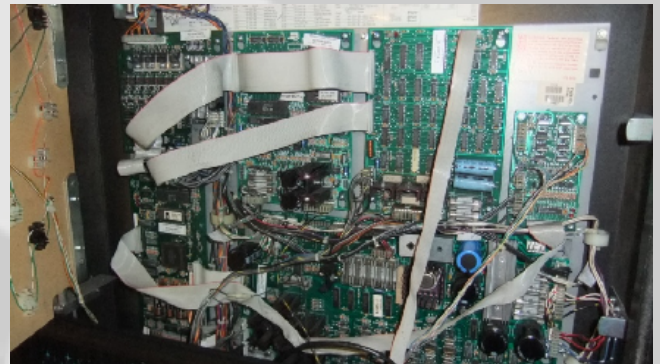


Locate the speaker connectors shown by the red arrows in the picture. Remove two speaker connectors by carefully rocking the connectors while pulling them out:

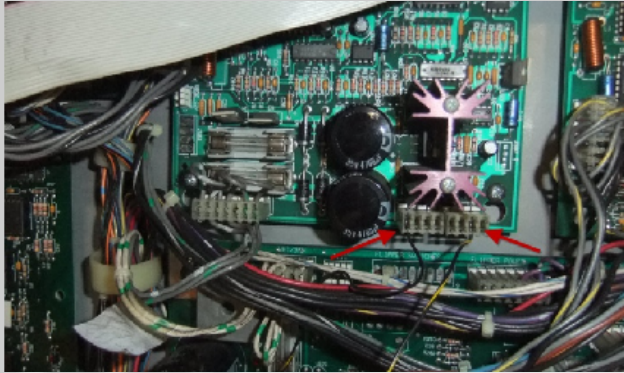


Plug supplied Pinnovators cable into the RJ45 jack on the Back Box Board Connector.




Insert the Back Box Board into the speaker connectors on the sound card as shown below. Make sure it's fully inserted and aligned properly. **ALIGNMENT is CRITICAL! You may damage your sound board if the connector is not properly aligned. Check it twice!**

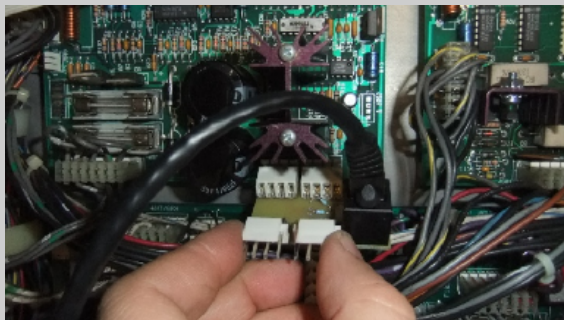

Insert the original Speaker cables on to the pins of the Back Box Board. Note: the connectors can go on either set of pins without causing damage and will function properly.

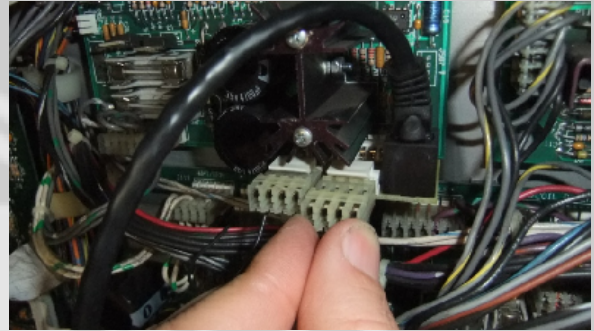

Route the cable into the cable harness clip as shown.

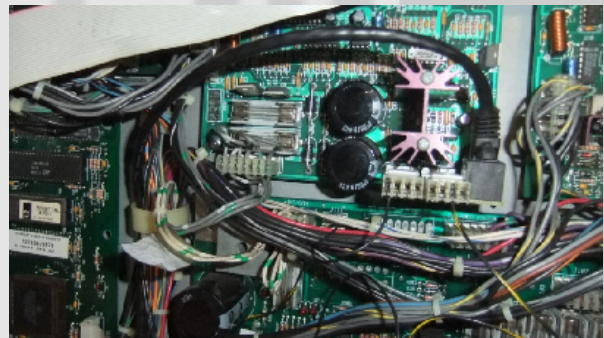


Feed the remaining cable down the bottom of the Back Box and into the cabinet.


Reassemble the Back Box.

6. Coin Door Installation PinPac1:

Remove Dollar Bill Acceptor blank plate by unbolting the two or four nuts as shown and / or the two screws below as shown. Note: Save the washers. The washers are used to properly space the length of the screw. Some coin doors have four threaded studs attached to the coin door. The PinPac1 Universal plate will fit most coin doors and can be secured using the original hardware.

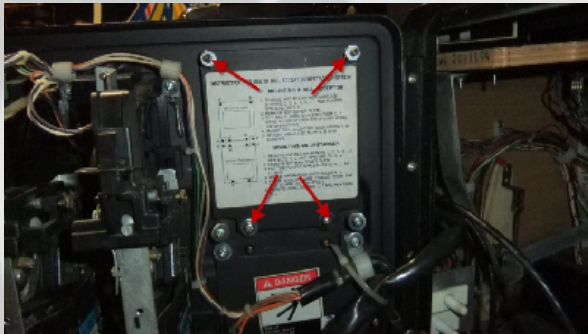

Insert the PinPac1 plate as shown below. Position the ESD ground wire (the green wire) under the nearest available threaded stud. Fasten with the original hardware.

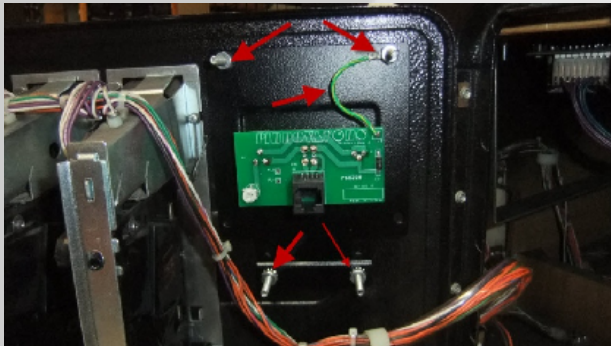


7. Coin Door Installation PinPac2:

Remove Dollar Bill Acceptor blank plate by unbolting the two or four nuts as shown and / or the two screws below as shown. Note: Save the washers. The washers are used to properly space the length of the screw. Some coin doors have four threaded studs attached to the coin door. The PinPac2 Universal plate will fit Stern coin doors.




Insert the PinPac2 plate as shown below. Position the ESD ground wire (the green wire) under the nearest available threaded stud. Fasten with the original hardware. (Note. This picture shows the cable installed but we will install at a later step.)

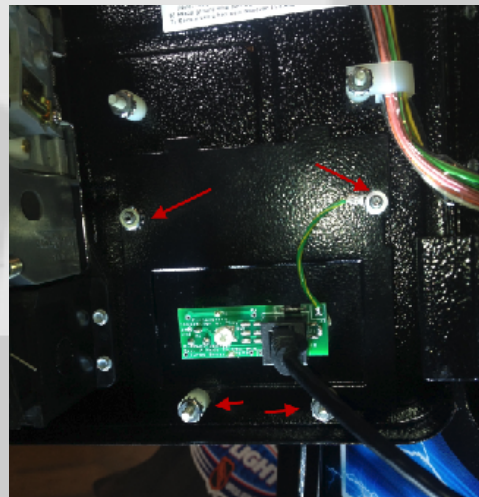

8. Running the cable

Using a helper, remove the playfield glass and lift up the playfield. Depending on the game, tuck the new cable into the wire harness clips as shown. Leave an extra foot of cable up at the Back Box area if you plan on folding the back box down. In some systems, the cable may not be able to be installed in the wire harness due to length and the position of the Sound board (Stern SAM). In this case, neatly place the wire on the floor of the cabinet and run it to the coin door area.

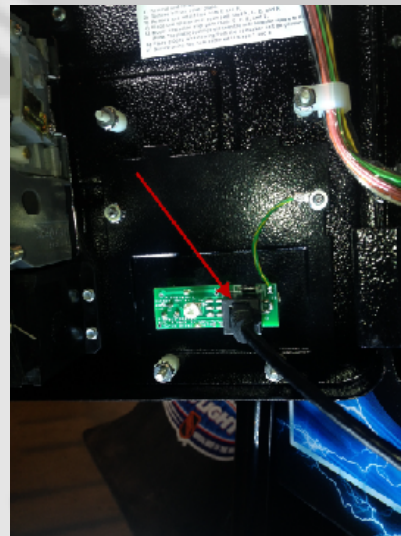

9. Coin door Final installation

Insert the end of the Interface cable into the RJ45 Connector on the PinPac1 or 2 front control panel as shown.








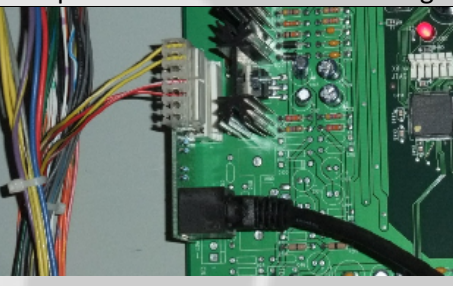

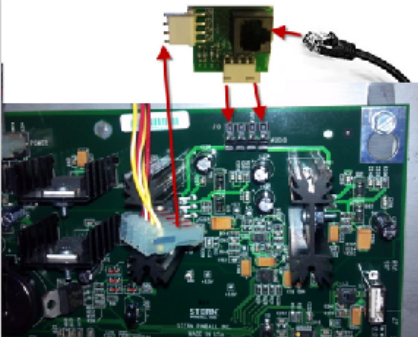
Route the cable into the cable harness clip behind the door as shown. Test the door to make sure it closes properly. Adjust as necessary.

10. Final Checkout

Power up the system and start a game. Make sure the front panel switch on the PinPac Control panel is in the "UP" position. Verify sound can be heard from the Back Box speakers and the lower Cabinet speaker. Switch the switch to the "Down" position and verify the speakers turn off. Insert headphones into the jack and verify levels in headphones can be adjusted with the volume control knob.

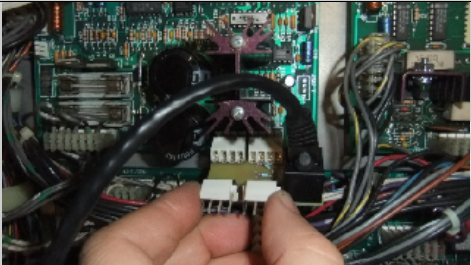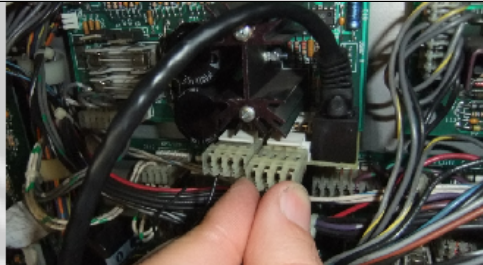


11. Back Box Boards

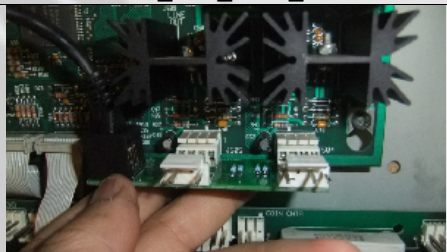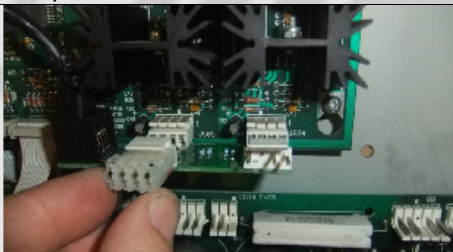Sound Board connector location.	Back Box Board installed with cable.
<p data-bbox="354 310 597 342">330_003_WPC_DM</p> 	<p data-bbox="898 310 1323 342">Sample games: The Addams Family</p> 
<p data-bbox="354 611 597 642">330_004_WPC_DCS</p> 	<p data-bbox="833 611 1385 642">Sample games: Star Trek The Next Generation</p> 
<p data-bbox="410 898 638 930">330_005_WPC_95</p> 	<p data-bbox="881 898 1287 930">Sample Game: Medieval Madnes</p> 
<p data-bbox="402 1186 646 1218">330_012_STN_WST</p> 	<p data-bbox="881 1186 1328 1218">Sample Game: The Lord Of The Rings</p> 
<p data-bbox="329 1507 719 1539">330_013_STN_SAM Stern S.A.M.</p> 	<p data-bbox="979 1507 1328 1539">Sample Game: Transformers</p> 

12. Trim Pot Function

The PinPac front panel board has a small trim pot mounted on the PCB only accessible when the coin door is open.

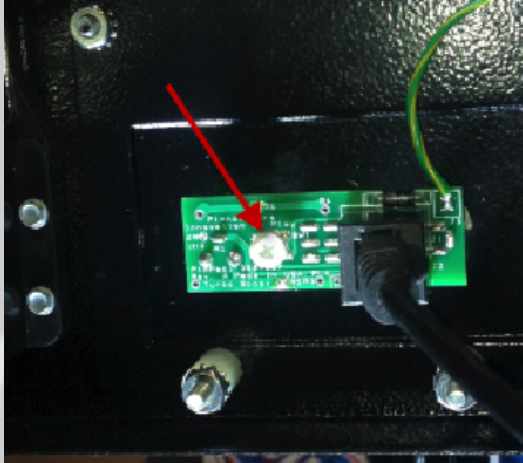

This trim pot has different functionality depending on the Back Box Board type. The main purpose was to allow the user to “Mix” the Cabinet speaker channel and the Back Box Speaker channels going into the headphones. The trim pot provides a reasonable amount of mix on most of the boards. Note that the WPC-Dot Matrix system really only has ONE channel so the trim pot can’t adjust the mix, just the overall level in the headphones.

Ref	Pinnovators Back Board Part Number	Description	Trim Pot Function
1	330_003_WPC_DM	WPC-Dot Matrix	Overall level in the headphones
2	330_004_WPC_DCS	WPC_DCS	Cabinet and Back Box mix
3	330_005_WPC_95	WPC_95	Cabinet and Back Box mix
4	330_012_STN_WST	Stern Whitestar +modified	Cabinet and Back Box mix
5	330_013_STN_SAM	Stern S.A.M. Board System	Cabinet and Back Box mix

13. Recommended Headphones.

Pinnovators tested the PinPac1 and 2 on many different headphones. Our favorite was the beats by dr. dre. We also tested a moderately priced set of headphones ~\$30 and was still blown away by how good the bass response was and how clear the treble was!

Thank your purchase of our product! We hope you get many years of service from it.

The Pinnovators Team.